


#### Order #XXXXX MOD-1335 iPad Kiosk

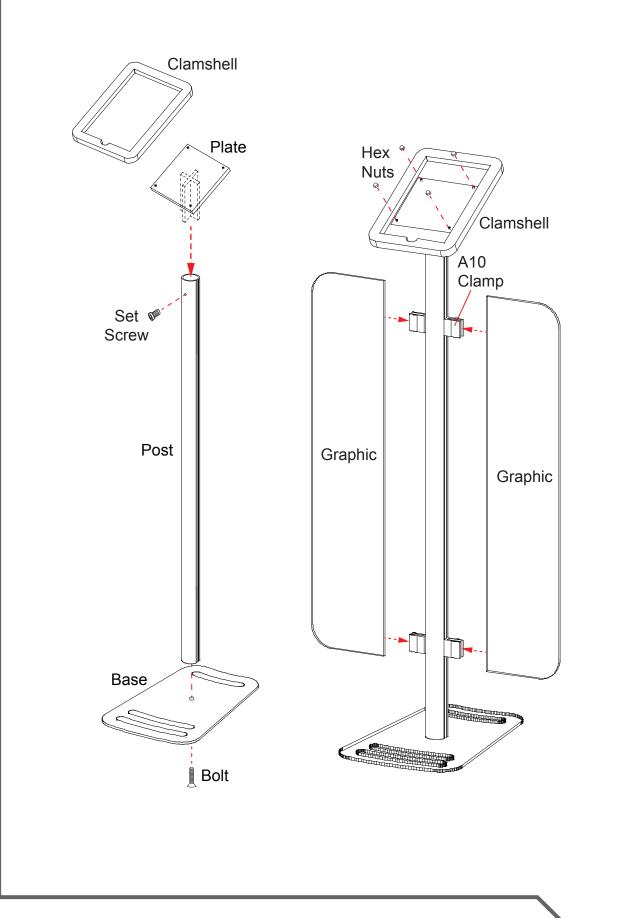



© 2018

#### Steps:

- 1) Attach base to post, using bolt.
- 2) Attach plate to post, using set screw.

- 3) Attach clamshell to plate, using hex nuts.
- 4) Attach graphics to A10 clamps. See A10 Clamp detail.
- See Cord Management For iPad detail.

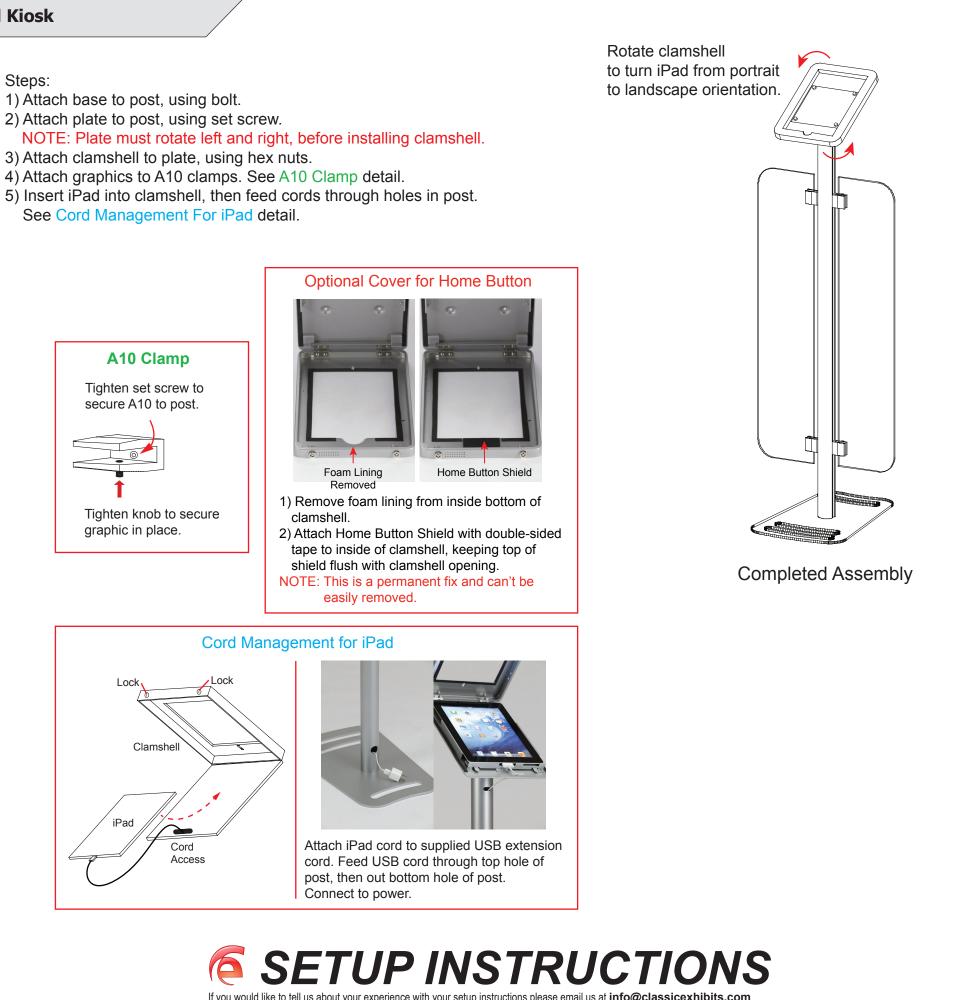

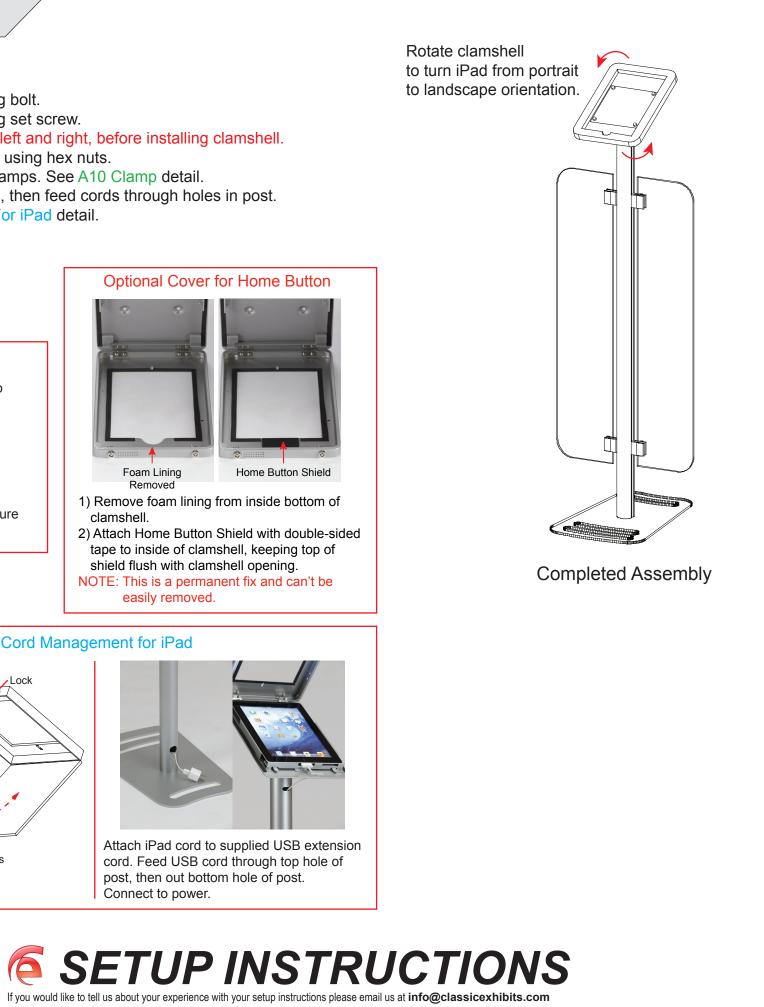


www.classicexhibits.com




# **General Setup Instructions**

- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

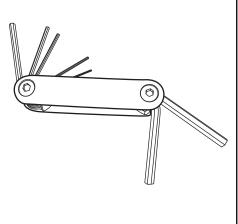

Hex Tool - Essential for Assembly

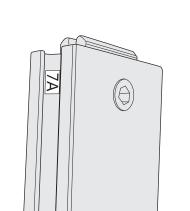










## Cleaning & Packing

- For Cleaning Metal, Plex, & Laminate Parts: Use a MILD NON-ABRASIVE cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure. Heat and UV exposure will warp and fade components.
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

## Disassembly


- For loss prevention, tighten all setscrews and locks during disassembly

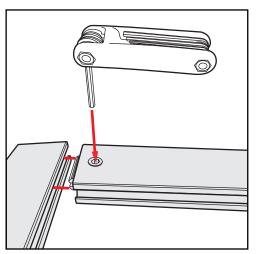


Extrusion & Lock Connection


**Spline Connection** 

Base Plate & Extrusion Connection

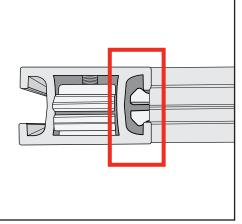

Engaged Lock

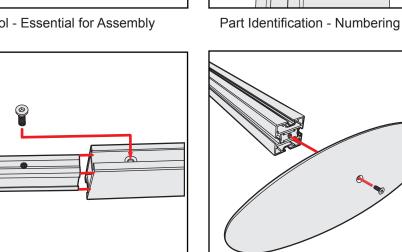

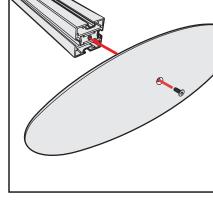



### DO NOT USE POWER TOOLS

#### LADDERS OR LIFTS MAY BE REQUIRED

### ALL CONNECTIONS MUST **BE TIGHTLY SECURED**