




General Setup Instructions

- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- explanation for assembly.

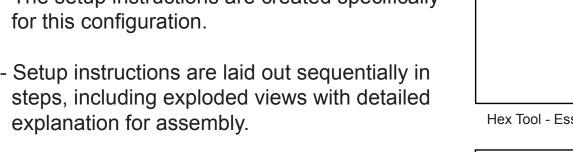


Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a MILD NON-ABRASIVE cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure. Heat and UV exposure will warp and fade components.
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

Disassembly

- For loss prevention, tighten all setscrews and locks during disassembly

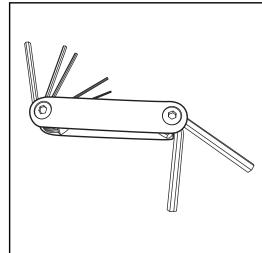


Hex Tool - Essential for Assembly

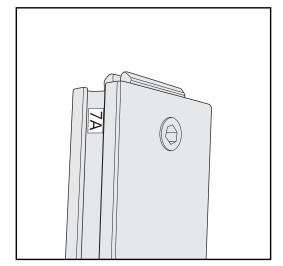


Part Identification - Numbering



WARNING

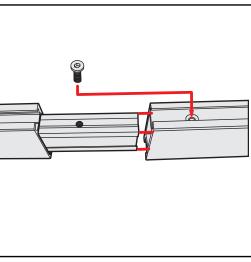

Spline Connection

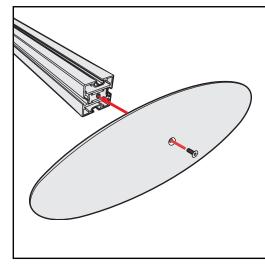


Base Plate & Extrusion Connection




DO NOT USE POWER TOOLS



LADDERS OR LIFTS MAY BE REQUIRED

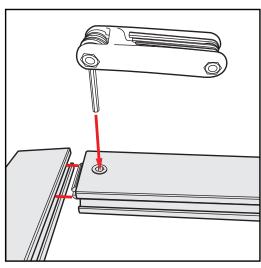

Extrusion & Lock Connection

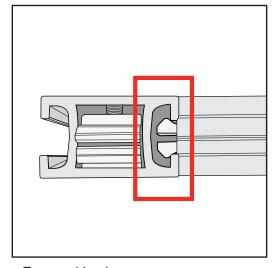



Engaged Lock





ALL CONNECTIONS MUST BE TIGHTLY SECURED


Top View of Each Level

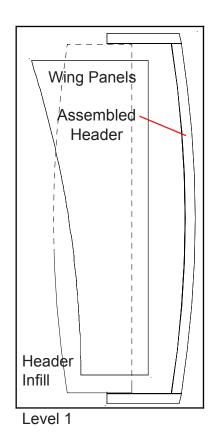

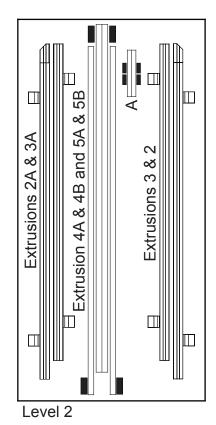


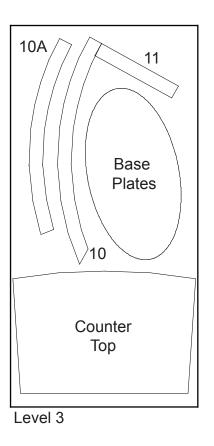

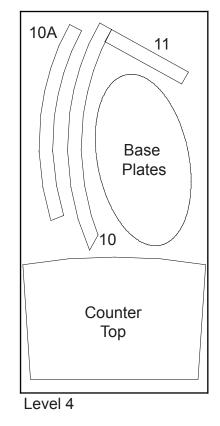

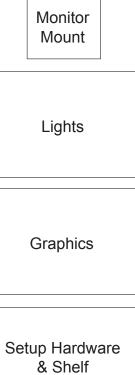

Top View of Each Level

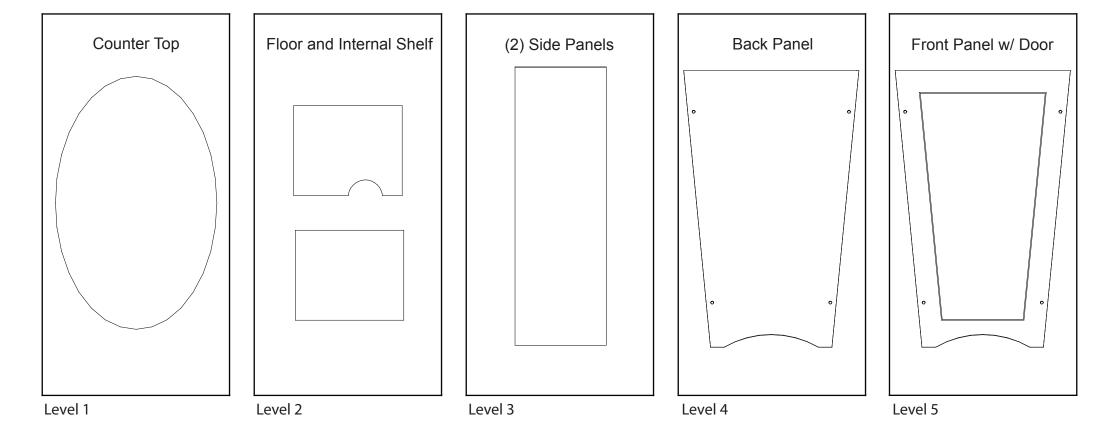






Item	Qty.	Description
1	2	Base Plate
2A/2B	1/1	42" Vertical Extrusion
3A/3B	1/1	42" Vertical Extrusion
4A/4B	1/1	45" Horizontal Extrusion
5A/5B	1/1	45" Horizontal Extrusion
6A/6B	1/1	2.5" Angle-Cut Vertical


Steps:

- 1) Attach Base Plates [1] to lower Verticals [2A,3A], using bolts.
- 2) Connect Verticals [3A,3B] and [2A,2B] with Connection Bars [B]. See Knobs on Backside detail.
- 3) Connect Horizontals [4A,4B] and [5A,5B] with Connection Bars [A]. See Knobs on Backside detail.
- 4) Connect Vertical assemblies [2A,2B,3A,3B] with Horizontal assemblies [4A,4B,5A,5B]. See Connection Lock with Knob detail.
- 5) Connect angled Verticals [6A,6B] to upper Verticals. See 2.5"h Angle-Cut Vertical Attachment detail.
- 6) Attach graphics to Velcro on back side of frame.

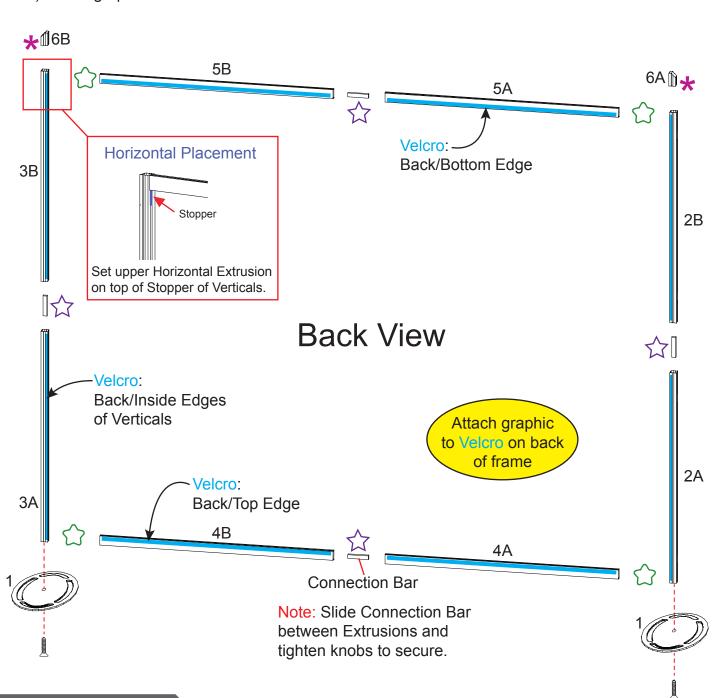

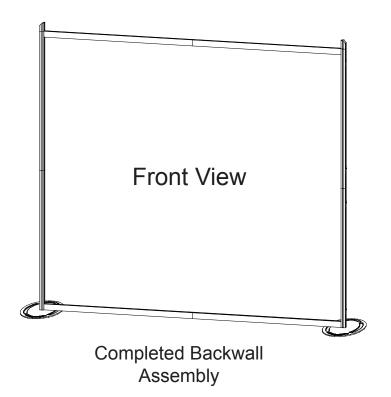

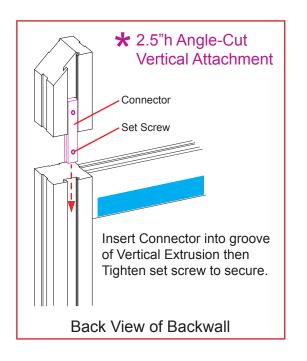

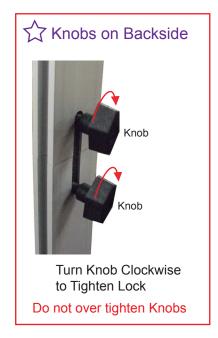




Order #XXXXX Backwall Attachments

Steps:

- 1) Attach lights to top Horizontals. See Light Connection detail.
- 2) Attach assembled Header [7/8/9] with Graphic Infill to top Horizontal Extrusions [5A/5B].
- 3) Attach assembled counter supports [10/11] and Shelf to Verticals [2A] & [3A].
- 4) Attach Support Legs [10A] to counter supports [10/11].
- 5) Attach Flange Plates [11A] to top of Curved Extrusions [10].
- 6) Attach Counter Tops to [11,11A]. See Counter Top Attachment detail.
- 7) Attach Wings to A10 clamps. See Wing Attachment detail.

8) Attach Monitor Mount to Vertical [2B]. See Monitor Mount detail.

9) Attach Graphic to Vertical [3B]. See Graphic Attachment detail.

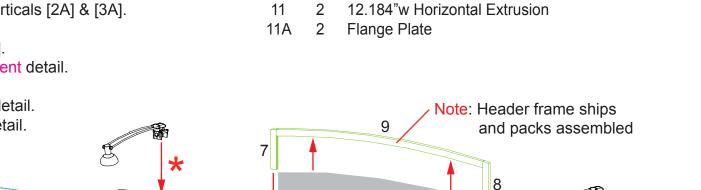

Item Qty. Description

30.2" Curved Extrusion

Support Leg

2

10A

Wing Attachment

Slide A10 clamp into groove of Extrusion.




When desired location is found, tighten Set Screw to secure.



Tighten Black Plastic Set Screw to secure Wing in place.





Keep A10 clamps attached to Verticals

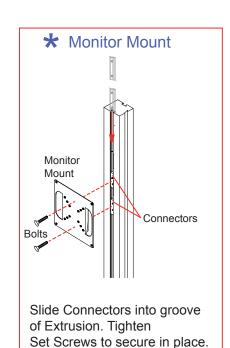

Attach Monitor Mount back

plate to Extrusion, using bolts.

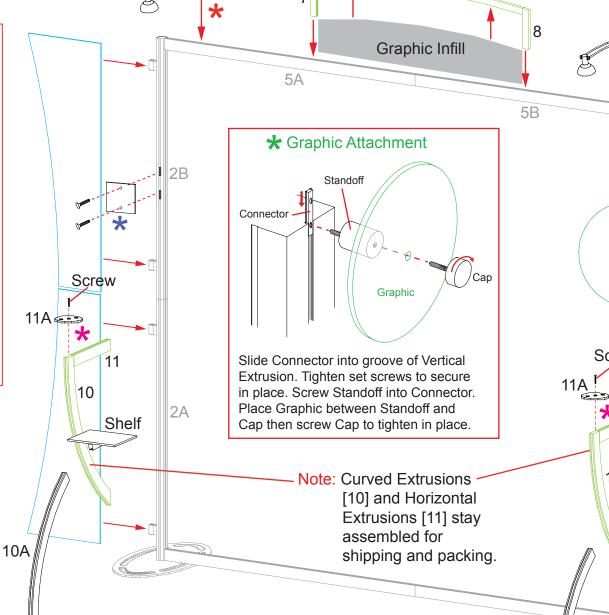

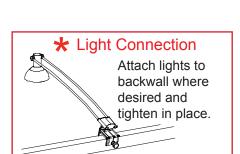

Completed Assembly

3B

3A

*

Screw


11

10

10A




* Counter Top Attachment

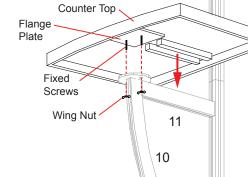




Setup Instructions:


- 1) Attach pins at bottom interior of Side Panels. Note: Pins are designed to be slightly angled.
- 2) Use Standoff Screws to secure the Front Panel with Door and Back Panel to the Side Panels.
- 3) Slide Floor into the bottom of assembled Counter base. The Floor will sit on pins of the Side Panels.
- 4) Connect Velcro on Shelf Supports to fabric inside panels.
- 5) Place Shelf on top of Shelf Supports.
- 6) Attach the Counter Top to assembled Counter Base. See Counter Top Attachment detail.

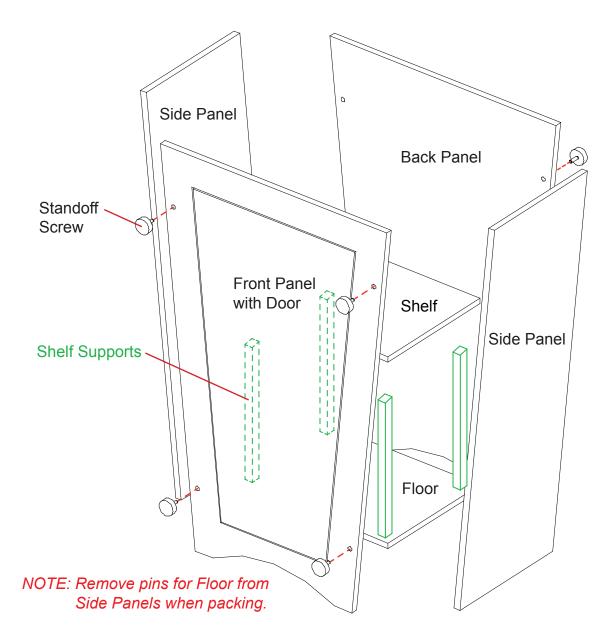

Pedestal Base Assembly

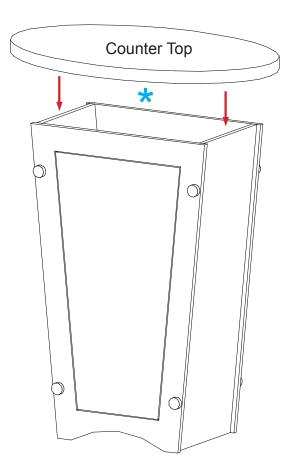

Counter Top Attachment

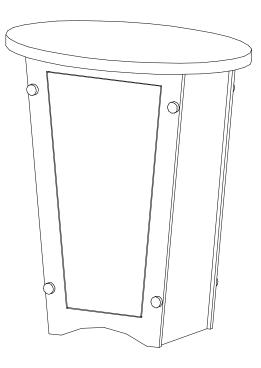

Completed Counter Assembly

